

Important Media Center Updates

Your system uses Microsoft® Windows® XP Media Center Edition 2005. Read this updated information before starting the system and using the Media Center setup wizard. HP recommends that you keep this information with your other PC documentation.

IMPORTANT: For the latest information about setting up your HP Media Center PC, refer to the setup poster that was included with your PC.

Electronic Program Guide

The Media Center Electronic Program Guide mentioned in the documentation that came with your HP Media Center PC is not supported in Singapore.

TV Tuner May Assign Different TV Channels Than Your TV Signal Provider

Your TV tuner that came with your PC automatically assigns channel numbers when your TV tuner scans for the TV channels in your area. Some of your channels may not match the channels assigned by Media Center and may need to be reassigned.

Editing or reassigning channel numbers

- 1 Click **Start** on the taskbar, and then click **Media Center**.
- 2 Click **Settings, TV, Guide**, and then click **Edit Channels** to edit the channel numbers currently assigned by Media Center.
- 3 Select **Edit Numbers**.
- 4 Use the numeric keypad on your keyboard to enter the number of the correct channel, and then press OK on the remote control.
- 5 Select **Assign channel** to assign a new number.
Or
Select **Share channel** to share the channel number with another channel.
- 6 Select **Save** when you have edited all the channels.
- 7 If you need to go back to the channel numbers automatically assigned by Media Center, select **Restore Default**.

Adding missing channels

Some TV channels may not appear in the channel lineup after your TV Tuner has scanned for the channels in your area. To add the channels that are missing or to change the associations between channel numbers:

- 1 Click **Start** on the taskbar, and then click **Media Center**.
- 2 Click **Settings, TV, Guide**, and then click **Add Missing Channels** to add the names and numbers of the channels you are missing.
- 3 Click **Add Channel**.
- 4 Use the numeric keypad on your keyboard to enter the number of the missing channel, and then select **Next**.
- 5 Enter the correct channel number, and then select **Add**.
- 6 Repeat steps 3 through 5 to add additional channels.
- 7 Click **Done** when you've added all the channels.

Removing unwanted channels

If your TV tuner picks up scrambled TV channels that you do not want to appear in your channel lineup, you can remove them.

- 1 Click **Start**, and then click **Media Center**.
- 2 Click **Settings, TV, Guide**, and then click **Edit Channels** to remove the names and numbers of the channels you don't want to appear in the Guide.
- 3 Remove a check from the check box next to the channel you want to remove.
- 4 Click **Save**.

Using the Media Center FM Radio Tuner

The Media Center FM Radio tuner scans to 0.1 less than the actual channel. For example, the radio tuner may tune to 0.1 rather than 0.2 of a radio frequency.

You can manually set radio channels, which may improve the sound quality. To set radio channels, refer to the procedures in the *Microsoft Windows XP Media Center Software Guide*.

 
Teletext Support

Media Center and your Media Center remote control do not support Teletext in all countries/regions, even if your TV provider supports Teletext.

Teletext may work for antenna and cable point channels, but Teletext does not work for cable box channels.

Copyright © 2005 Hewlett-Packard
Development Company, L.P.

Printed in



5 9 9 1 - 2 3 7 8